

Hyundai Ionic Hybrid 2016-



Linkes Blech einschieben



Insert left metal plate



Innerhalb des Handschuhfaches die beiliegende Schraube ins Blech eindrehen



Mount enclosed screw into metal plate within glove box



Änderungen vorbehalten Subject to change


Hyundai Ionic Hybrid 2016-



Inserez la gauche tole



Introduza la chapa izquierda

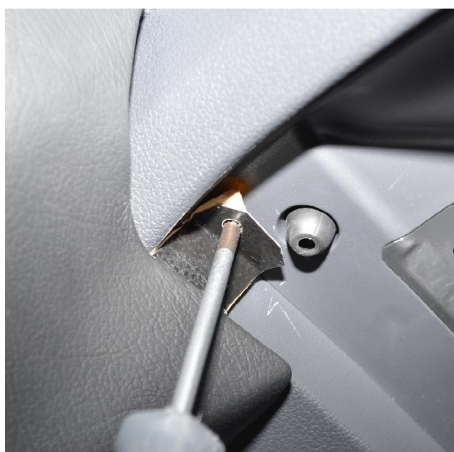

Vissez la vis jointe à l'intérieure de la boîte à gants dans la tôle



Dentro de la guantera atornille el tornillo adjunto en la chapa




Hyundai Ionic Hybrid 2016-



Linker plaat er tussen schuiven



Wsunac lewa blaszke

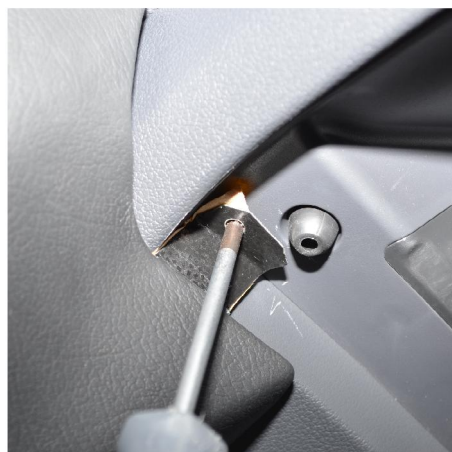

In het dashboardkastje de meegeleverde schroef in het metalen lip draaien



W wewnatrz schowka przykrecic zalaczona srube



Nous nous réservons la possibilité de modification Salvo posibles modificaciones