




## Installation Manual Double DIN Kit

Standard: 381040-01

Rubber-Touch: 391040-01

### • Peugeot 308

Compatible with double DIN devices

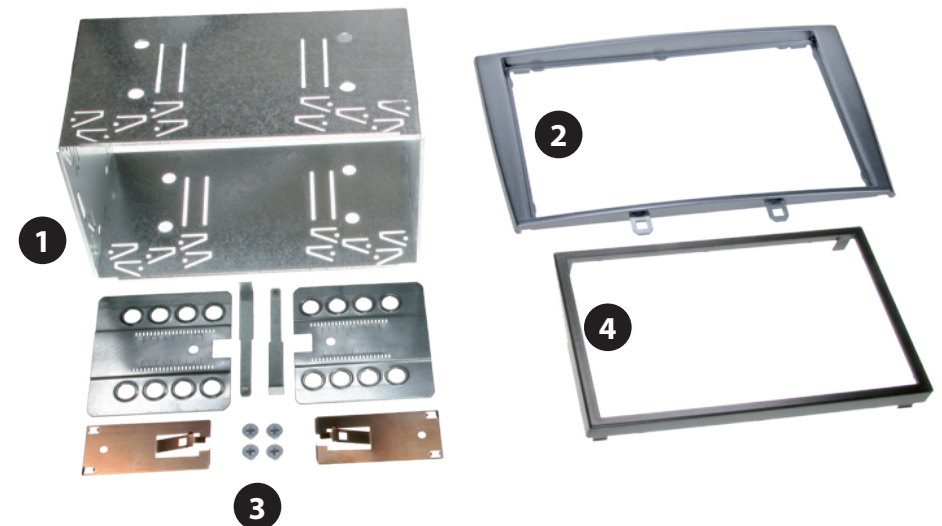


#### Double DIN Kit contents

- (1) Metal Frame
- (2) Facia Plate

Installation Kit (3)  
Trim Frame (4)

## Installation Manual Double DIN Kit 381040-01 / 391040-01

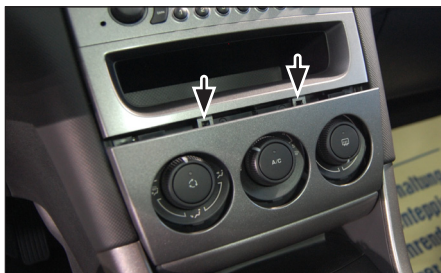


1. Dismount panel cover of the air condition control unit.




2. Remove pocket below OEM head unit.

*(We recommend to use a plastic wedge).*

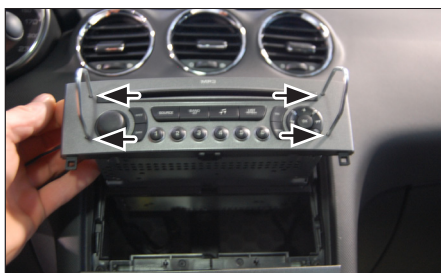


3. Insert two radio release keys in the openings of the OEM head unit.

Remove the OEM head unit.

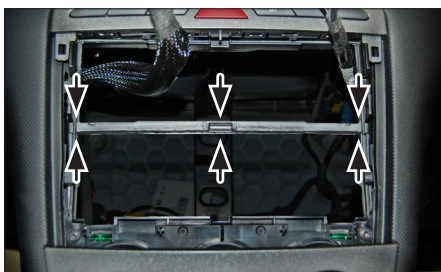


4. Remove middle bar to clear space for the Double DIN head unit.

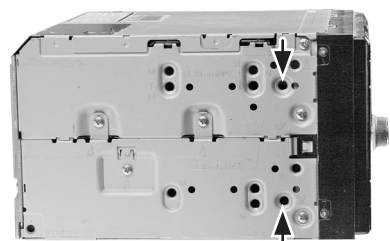

(sample photo)

Mount the metal brackets to the double DIN head unit.

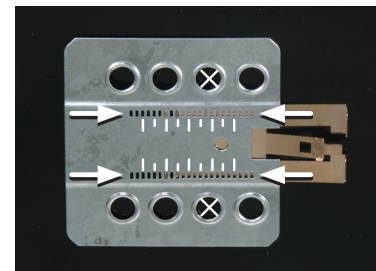

(sample photo)

*The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)*



5. Place facia plate on the dashboard.

Push the Metal Frame into the facia plate

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

*All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*