



- Remove buttons from OEM panel and attach them to new fascia plate



- Connect all cables
Place fascia plate on dash board



- Reinstall everything in reverse
Order to finish installation




Double-DIN Kit Installation Manual

part-no.: 381230-29
colour: piano black

- Opel Adam (Type S-D) 01/2013 ->

Compatible with these navigation devices

Double DIN Navigation

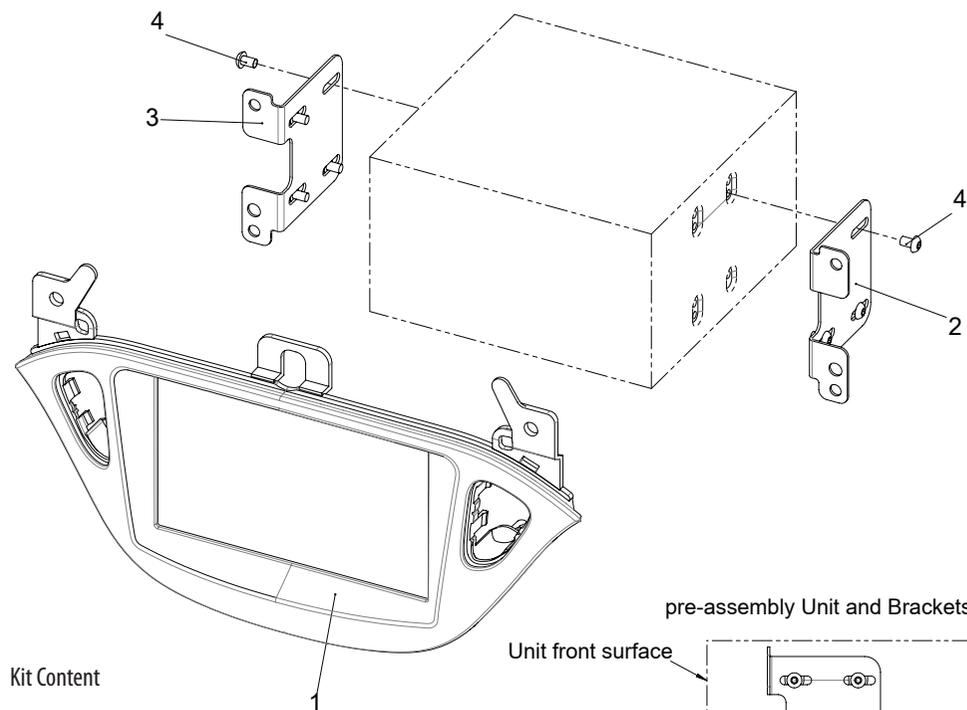


Kit Content

- Facia Plate
- Mounting bracket right
- Mounting bracket left
- Flat Headed Screw


*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*



1. Opel Adam OEM dash board

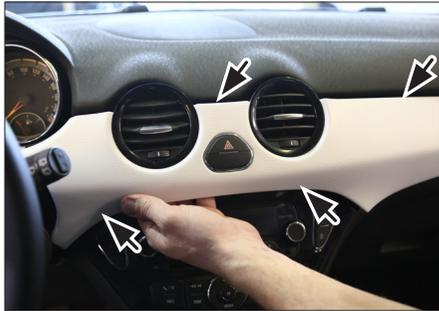

2. Unclip and remove OEM panel

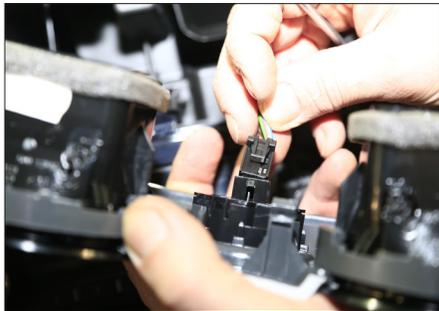

3. Unplug hazard light switch




4. Remove 2 screws of head unit cover



5. Unclip OEM cover carefully (see arrow)



6. Remove OEM cover (unplug all connectors carefully)

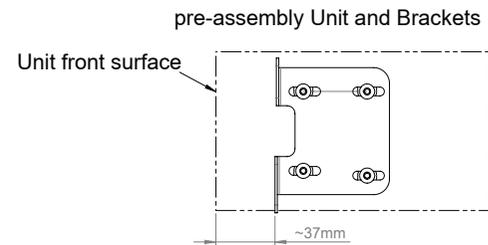

7. Attach mounting brackets to double DIN head unit



8. Connect all required circuit points Place Double DIN head unit on dash board

Fix double DIN head unit with 4 OEM screws