


9. Attach mounting frames to double DIN head unit

Connect all required circuit points

Push double DIN head unit into metal frame

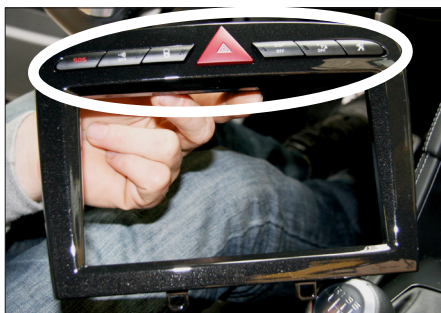

10. Mount top panel with hazard light switch to double DIN facia plate



11. Place facia plate



12. Re-install everything in reverse order to finish installation



Installation Manual

• Peugeot 308 09/2007->	color	part-no.
• Peugeot 308CC 03/2009->	warm silver	381040-03-2
• Peugeot RCZ 04/2010->	black nacre	381040-03-3

Compatible with these double DIN devices


Double-DIN Navigation




- (1) facia plate
- (2) metal frame



1. Remove lower tray under OEM head unit

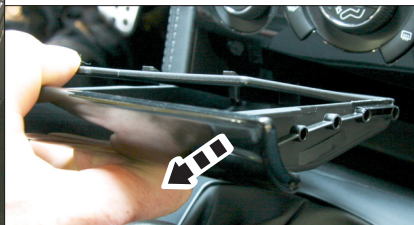

2. Remove rubber inlay

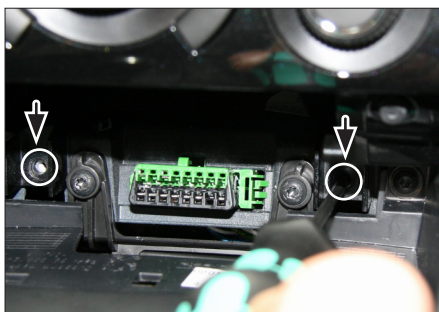


3. Remove screws



4. Remove panel




5. Remove OEM head unit

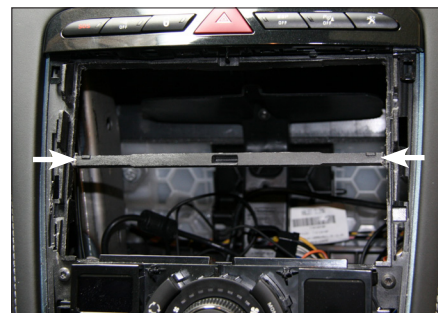

6. Cut away middle bar to clear space for double DIN head unit



7. Remove top panel
Remove buttons

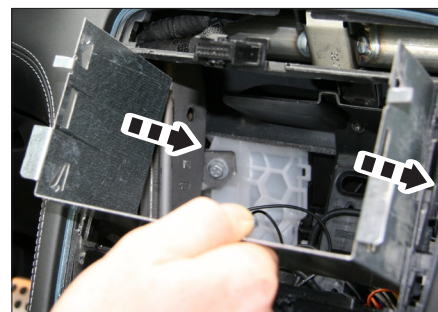

8. Mount metal frame to dash board

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.