


9. Attach mounting brackets to 2-DIN head unit

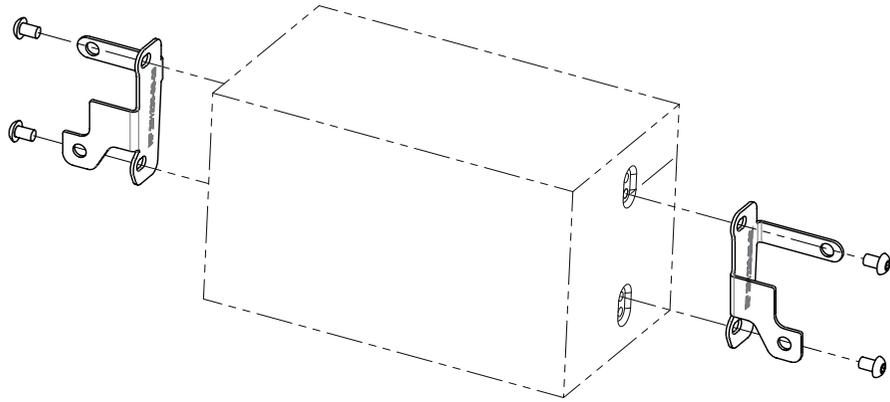

10. Connect all cables  
Place 2-DIN head unit onto dash board

Fix 2-DIN head unit using OEM screws (bottom) and the philips head screws on top



11. Connect hazard light switch

Place new facia plate on dash board until it snaps in to finish installation



## Double-DIN Kit Installation Manual


### Opel Karl 2017>

Only for models with 2 fins between the air vents


(please use part-no.: 381320-31-1 for models with 3 fins)

black 381230-33-1

piano black 381230-33-2

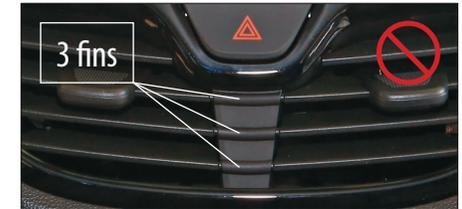

**Only compatible with mechless units (max. depth 120 mm)**

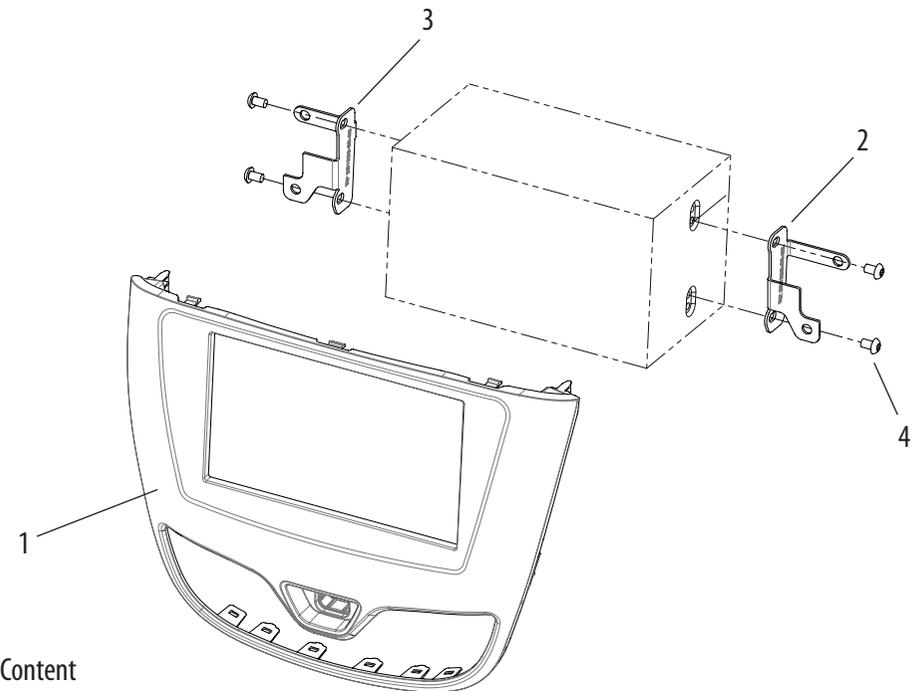

Kit Content

(1) Facia Plate

(2) Mounting bracket right

(3) Mounting bracket left

(4) flat headed screw (4x)

All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.



1. Opel Karl OEM dash board




5. Unclip and remove hazard light switch from OEM panel



2. Unclip OEM panel  
Unplug hazard light switch and remove OEM panel




6. Unclip and remove air vents from OEM panel

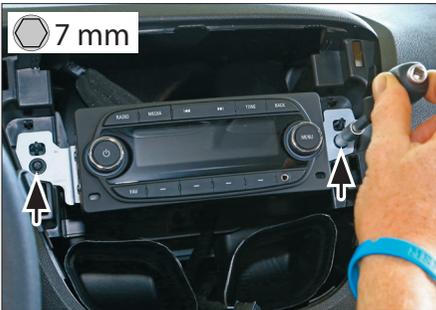


3. Remove 2 screws of OEM head unit (see arrows). Put the OEM screws aside because they will be used later

Unplug all connectors  
Remove OEM head unit

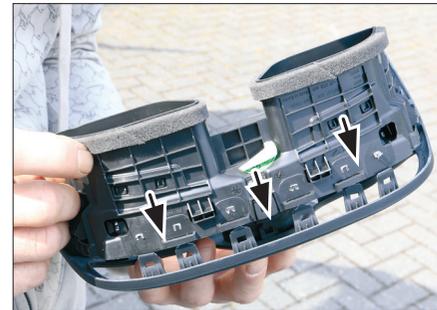

7. Place air vents onto new 2-DIN fascia plate

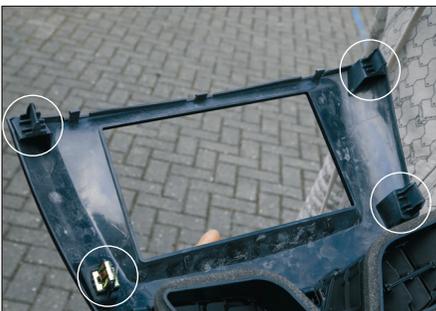

4. Remove 4 clamps from OEM panel  
Place 4 clamps onto new fascia plate



8. Place hazard light switch onto new 2-DIN fascia plate